



FP2028 QE20 Air Filter Installation Instructions

1. General Description

This sheet describes installation of the FP2028 QE20 Air Filter Kit in a QE20 cabinet.

When an FP2019 QE20 Cooling Kit is installed in a QE20 cabinet, an air filter is fitted to the bottom of the cabinet to stop dirt being sucked into the cabinet. When this filter becomes clogged, it needs to be replaced with a new one.

The FP2028 QE20 Air Filter Kit provides 5 replacement filters.

2. Kit Contents

Each kit contains:

- 5 x QE20 Air Filters
- 1 x LT0728, these installation instructions.

3. Replacing the Air Filter

Figure 1 shows the mounting of the air filter chassis in the bottom of a QE20 cabinet. To replace an existing filter, undo the M5 screws at each end of the filter chassis that hold the chassis in place. Remove the chassis from the cabinet, carefully remove the filter from the chassis and discard it.

Slide the new filter into one end of the chassis and pull into place. Position the filter so it is centred and square in the chassis, with no air gaps around the filter.

Fit the chassis back into the cabinet as shown, slide it into the bottom cavity against the front of the cabinet, align and secure in place using the two screws.

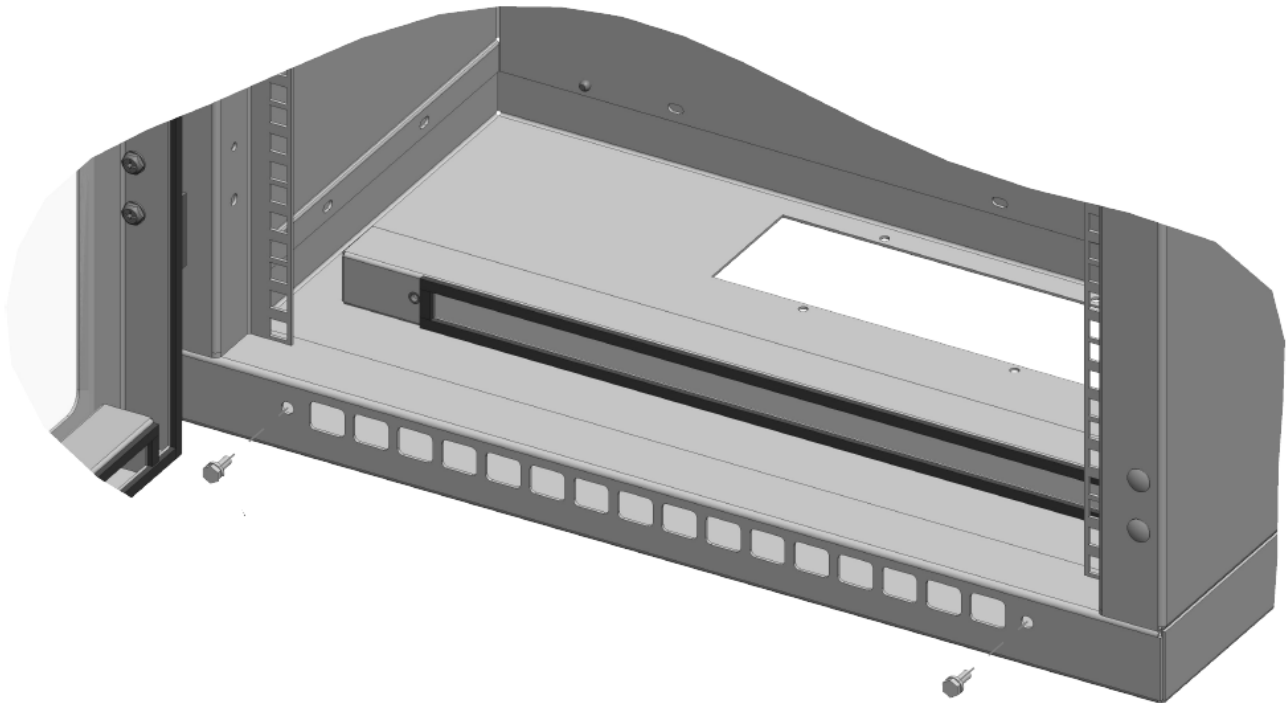


Figure 1 – QE20 Air Filter Mounting